


Chapter 1 Operation Panel

1.1 Operation Panel Diagram

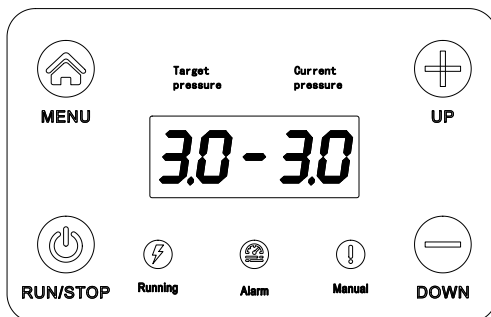

Name	Definition and operating instructions
"MENU" button	Click on the 0 level menu to view the role of the parameter for shifting, long press 2S to enter the 1 level parameter setting menu;
"RUN / STOP" button	Click run / stop / reset in level 0 menu; click confirm in 1/2/3 / level password input menu;
"UP" button	Click the 0 level menu to increase the set pressure, frequency, modify the parameter value, long press to increase quickly;
"DOWN" button	Click the 0 level menu to decrease the set pressure, frequency, modify the parameter value, long press to quickly decrease;
"Target pressure" Indicator	When the display shows "target pressure" and "current pressure", it lights up when the pressure is adjusted;
"Current pressure" Indicator	When the display is "target pressure" and "current pressure" light up;
"Running" lights	Always on during operation, blinking during sleep, and extinguished when stop fault;
"Alarm" indicator	Blinks during faults and goes off when it is not in a fault state;
"Manual" indicator	When P0-44 = 1 speed control mode, the indicator light is on, other modes are off;

1.3 Operation and display mode

(1) Status display mode:

When power on the SPD, it enters the status display mode. When it stops, it displays pressure setting. Press "+" or "-" to modify pressure setting. When it is running, it displays current pressure, operating frequency, and setting pressure. Press the "+" or "-" to switch the display; press "MENU" for two seconds to enter the parameter setting mode.

(2) Parameter setting mode:

To view or set the parameters, as starting from status display mode, press the "MENU" for 2 seconds to enter the parameter setting mode, and then press the "RUN / STOP" starts to set parameters. After you set the parameter press twice "MENU" to exit parameter setting mode, and return to the status display mode.

(3) The alarm display mode:

Automatically enter this mode when a drive fault or warning arises; press the "RUN / STOP" to reset, or it can automatically restored the previous mode after the alarm is eliminated.

1.4 Menu Operation

Three-class menus are:


- ① Function group (first class)
- ② Function code setting(second class)
- ③Function code setting(third class)

Instruction: In the third class menu, pressing “MENU” or “RUN/STOP” can return to the second class menu. The difference is that pressing “RUN/STOP” first saves parameters to control board, and then returns to the second class menu and shifts to next function code automatically; pressing “MENU” returns to the second class menu directly without saving parameters and keeps staying at current function code.

Under the third class menu, only flicker bit can be modified. Revisable bit will shift automatically after 5 seconds.

Note: For parameters marked with “●”, please modify them in stopped state. Parameters marked with “◎” are actual detected and recorded values which can’t be modified.


Example: Modify P0.02 from 0 to 1

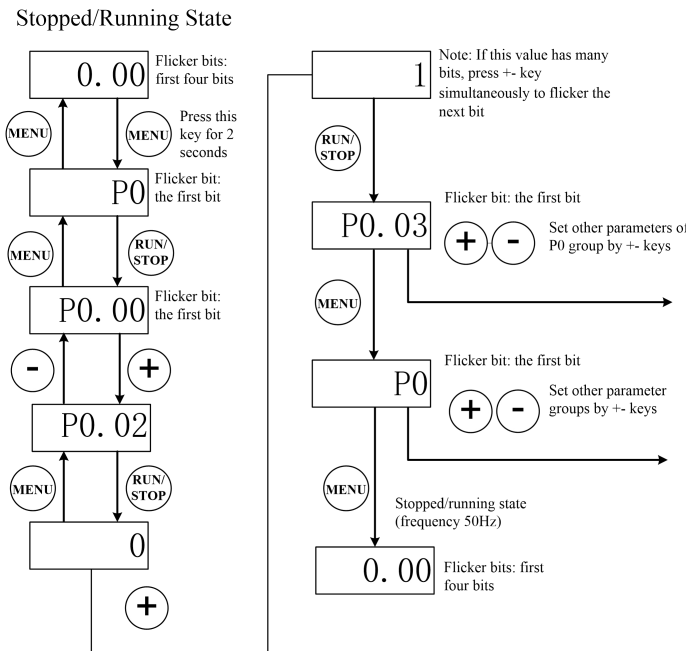

Remarks: $0.1\text{MPa} = 100\text{kPa} = 1\text{bar} = 1\text{kgf} / \text{cm}^2$

Chapter 2 Appearance and Wiring


2.1 Model Description

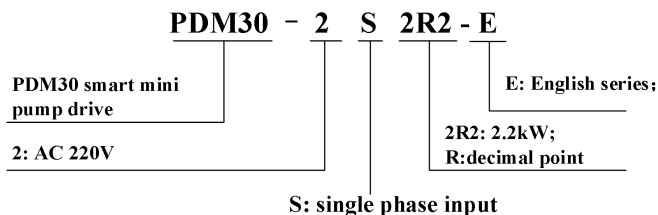

2.2 Selection table

Voltage	Model	Power (kW)	Size (mm)			Motor (kW)	Explanation
			H	W	D		
220V Single entry Three out	PDM30-2SR75-E	0.75	210	146	121	0.75	The factory default is 2.2kW, which can be adjusted by P1-12, 0 = 0.75kW 1 = 1.5kW 2 = 2.2kW
	PDM30-2S1R5-E	1.5	210	146	121	1.5	
	PDM30-2S2R2-E	2.2	210	146	121	2.2	


2.3Dimensions

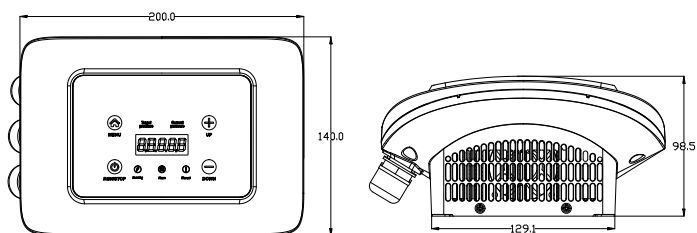


(Unit: mm)

2.4Installation Procedure Illustrations.


Step 1: Remove the bottom plate

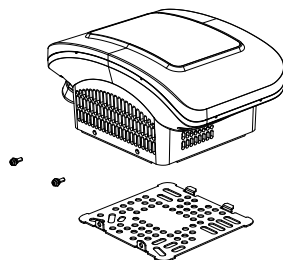


Step 2: Install the bottom plate

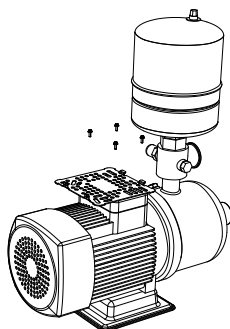


Step 3: Install the bottom plate

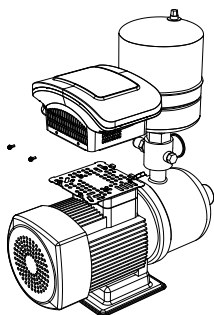

Step 4: The installation is complet

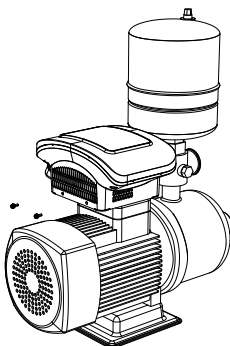

2.5Wiring Diagram of Main Circuit and Control Terminals

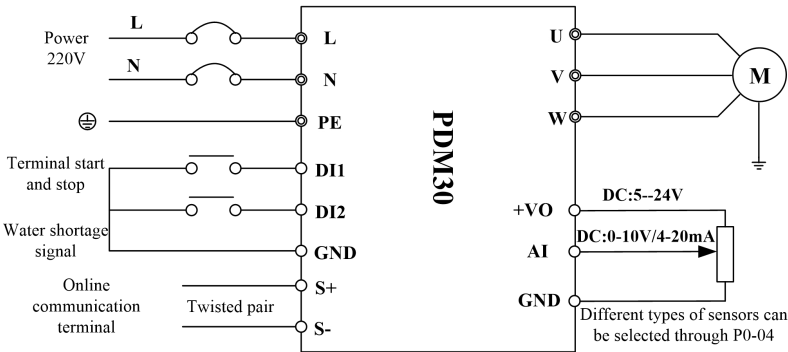

2.6Control Terminals

2.6.1 Control terminals

The wiring mode of control terminals is internal terminal wiring or outer lead connection, cabled-out by waterproof connectors.

S+	S-	DI1	DI2	GND	AI	VO
----	----	-----	-----	-----	----	----

Control terminals

2.6.2 Terminal instruction

Terminal symbol	Terminal name	Technical data
DI1	Multi-function input terminal 1	Enabled when connected to GND; Disabled when open
DI2	Multi-function input terminal 2	Enabled when connected to GND; Disabled when open
AI	Analog input terminal 1	It is 0 ~ 10V analog voltage input terminal or 4-20mA analog current input terminal, chosen by function codes.
VO	Positive terminal of analog power	+5V~+24V adjustable power; Output voltage value is set by function codes.
GND	Negative terminal of analog power	Reference zero potential of +5V~+24V adjustable power
S+	Standard RS485 communication terminal	Standard isolated 485 communication interface. Please use twisted pair or shielded wire
S-		

2.7 Wiring of Sensors

2.7.1 Terminal instruction

◆ VO ---5 ~ 24V Power terminal for transmissible pressure gauge/pressure transmitter

◆ AI ---0~10V analog signal input terminal (voltage feedback type) or 4~20mA signal input terminal (current feedback type)

◆ GND --- 5~24V signal common terminal


2.7.2 Sensor configuration instruction

A current type pressure sensor will be used by default; output signal is 4~20mA. If use other types of sensors, please refer to the setting parameters P0-03, P0-04, P0-05 in Chapter 4.5.


2.7.3 Wiring diagram

The drive can be connected to transmissible pressure gauge and pressure transmitter. Please connect wire according to below diagrams.

(1) **Transmissible pressure gauge:** working voltage 10VDC, output 0~10VDC. Wiring method is shown as below.

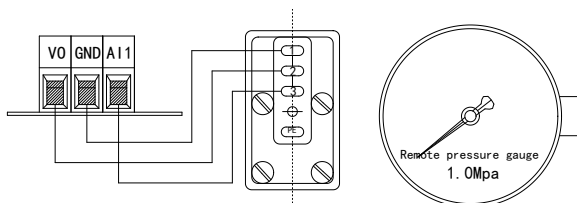

(2) **Pressure transmitter:** working voltage range 10 ~ 30V, output 4 ~ 20mA. Wiring method is shown as below.

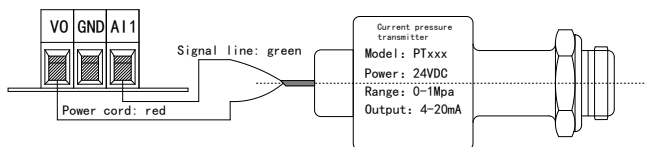

Notes: Model for PDM30-2SXXX products will be equipped with dedicated sensors (red line connected to terminal +VO; black line connected to terminal AI). For the wiring method of various sensors and the setting of relevant parameters, please refer to appendix.

Chapter 3 Quick Start

3.1 Parameter Settings

★Single machine debugging mode:

Under normal circumstances, the machine is equipped with standard input and output lines and sensors. When connecting the pump, the motor connection method needs to be adjusted from the original star (380V) to the delta (220V) working mode;

After power on, long press the "+" or "-" key for 3 seconds to enter the pressure setting mode, set the target pressure d, and then press the "start/stop" key to save, and then press the "start/stop" key to start the machine, and the machine will proceed Normal working mode;

P0-14 = 1 Power-on self-start function (need to be turned on by the customer)

Pump steering confirmation

After setting the parameters, you can do a short trial run to observe whether the steering of the water pump is correct. The pump steering can be changed in the following two ways:

Stop the inverter and exchange any two phases of the inverter output power lines U, V, W.

Stop the inverter and modify parameter P0-02.

★Multi-online mode:


Wiring: Connect all the machine terminals S+ that need to be connected in parallel, and all S- in parallel;

For parameter setting, refer to the macro parameter table below:

Please refer to the table below, to set the system quickly.

System Typ	Host Driver	Auxiailry1	Auxiailry2	Auxiailry3	Auxiailry4	Auxiailry5
Solo Pump setting	P0-47=1	\	\	\	\	\
Two VFDs, as Host drives	P0-47=2	P0-47=11	\	\	\	\
Three VFDs, as Host drives	P0-47=3	P0-47=11	P0-47=12	\	\	\
Four VFDs, as Host drives	P0-47=4	P0-47=11	P0-47=12	P0-47=13	\	\
Five VFDs, as Host drives	P0-47=5	P0-47=11	P0-47=12	P0-47=13	P0-47=14	\
Six VFDs, as Host drives	P0-47=6	P0-47=11	P0-47=12	P0-47=13	P0-47=14	P0-47=15
Emergent Mode	P0-47=9	Frequency source changed				

Terminal wiring diagram (5 auxiliaries at most):

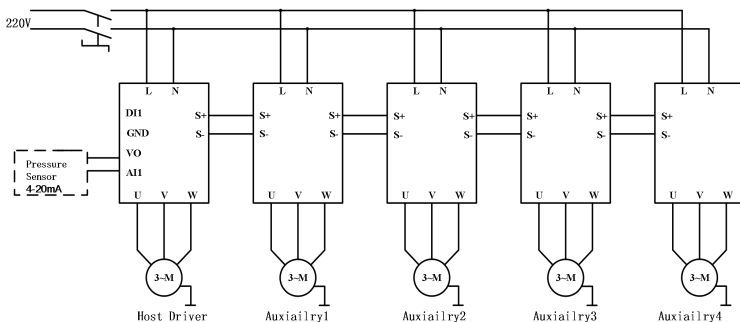

Chapter 4 Programming and Parameters

Note: “★”: The parameter can be modified in both standby and operating state.

“★”: The parameter can't be modified in operating state.

“●”: The parameter is the actual detected and recorded value which can't be modified.

4.1 Pressure and Protection Function Group

Function code	Description	Set range	Unit	Default	Modification level	Notes
P0-00	Pressure setting	1.0~P0-21	0.1bar	3.0	☆	
P0-01	Deviation of pressure	0.0~P0-00	0.1bar	0.3	☆	Dormancy awakens deviation pressure
P0-02	Operation direction selection	0: Same direction 1: Opposite direction	1	0	☆	Adjustable water pump steering
P0-03	Sensor range	1.0~200.0	0.1bar	10.0	☆	
P0-04	Sensor feedback type	0: 4-20mA/24V 1: 4-20mA/10V 2: 0-10V 3: 0.5-4.5V 4: 0-5V	1	0	☆	Different modes can be selected according to the sensor feedback signal used
P0-05	Pressure calibration factor	0.750 ~ 1.250	0.001	1.000	☆	
P0-06	Proportional gain P1	0.0 ~ 100.0	0.1	2.00s	☆	
P0-07	Integration time I1	0.00s ~ 10.00s	0.01s	0.50s	☆	

Function code	Description	Set range	Unit	Default	Modification level	Notes
P0-08	PID function selection	0: off 1: Sleep mode 1 2: Sleep mode 2	1	1	☆	
P0-09	PID sleep delay	0.0s ~ 100.0s	0.1s	5.0	☆	
P0-10	PID wake-up delay	0.0s ~ 100.0s	0.1s	3.0	☆	
P0-11	PID sleep frequency	P1-31 ~ upper limit frequency	0.01Hz	30.00	☆	If the frequency is lower than this frequency, the machine will go to sleep
P0-12	PID low frequency hold frequency running time	0.0s ~ 120.0s	0.1s	5.0	☆	
P0-13	PID sleep deviation pressure	0.0bar ~ 1.0bar	0.1bar	0.2	☆	
P0-14	Power on automatic start function	0: off 1: open	1	0	☆	After it is turned on, it will start automatically after power-on
P0-15	Power-on automatic start delay	0.0~100.0	0.1s	5.0	☆	
P0-16	Antifreeze function	0: off 1: open	1	0	☆	
P0-17	Antifreeze operating frequency	0.0~P1-06	0.01Hz	10.00	☆	
P0-18	Antifreeze running time	0~1000	1s	60	☆	
P0-19	Antifreeze operation cycle	0~1000	1s	300	☆	
P0-20	Leakage size factor	0.1~100.0	0.1	5.0	☆	

Function code	Description	Set range	Unit	Default	Modification level	Notes
P0-21	High pressure alarm setting value	P0-00~P0-08	0.1bar	9.0	☆	
P0-22	High voltage alarm delay time	0.0~120.0	0.1s	3.0	☆	
P0-23	Low pressure alarm setting value	0.0~P0-00	0.1bar	0.0	☆	
P0-24	Low voltage alarm delay time	0.0~120.0	0.1s	3.0	☆	
P0-25	Water shortage protection function	0: off 1: Judging water shortage according to frequency and current 2: Judging by frequency and pressure 3: Judging water shortage based on frequency, current and pressure	1	2	☆	
P0-26	Water shortage fault detection threshold	0.0~P0-00	0.1bar	0.5	☆	Water shortage will be judged below this pressure
P0-27	Water shortage protection testing frequency	0~Upper frequency	0.01Hz	48.00	☆	More than this frequency will judge water shortage
P0-28	Water shortage protection detection current percentage	0~100.0	0.1%	40.0	☆	When the operating current is less than this current, it is judged as water shortage

Function code	Description	Set range	Unit	Default	Modification level	Notes
P0-29	Water shortage protection detection time	0.0~200.0	0.1s	60.0	☆	After meeting the water shortage condition, alarm after this time
P0-30	Water shortage protection automatic restart delay	0~9999	1min	15	☆	After the water shortage fault is reported, after this time delay, the machine resets the fault code
P0-31	PID sleep rate	0 ~ 30	1	9	☆	
P0-32	Incoming water detection pressure	0.0~P0-00	0.1bar	1.0	☆	When the water outlet pressure is greater than this value, the fault will be reset after a delay of P0-30
P0-33	Incoming water detection time	0.0~100.0	0.1s	20.0	☆	
P0-34	AI minimum input	0.00V ~ +10.00V	0.01V	2.00V	☆	
P0-35	AI maximum input	0.00V ~ +10.00V	0.01V	10.00V	☆	
P0-36	Acceleration time 1	0.0s ~ 100.0s	0.1s	2.0s	☆	
P0-37	Deceleration time 1	0.0s ~ 100.0s	0.1s	2.0s	☆	
P0-38	Parameter initialization	0: No operation 1: Restore factory parameters, excluding motor parameters 2: Clear record information	1	0	★	

Function code	Description	Set range	Unit	Default	Modification level	Notes
P0-39	Parameter function lock	0: The parameter is not locked 1: Parameter lock	1	0	☆	
P0-40	Broken record	0-50	1	0.0	●	
P0-41	Radiator temperature				●	
P0-42	Software version number	.		1.000	●	

Function code	Description	Set range	Unit	Default	Modification level	Notes
P0-43	Main frequency source X selection	0: Digital setting (no memory after power off) 1: Digital setting (memory after power failure) 2: Keyboard potentiometer 3: AI1 4: Multi-speed command 5: Simple PLC 6: Digital setting (no memory when power off) 7: Digital setting (no memory after power off) 8: PID 9: Communication setting	1	8	★	
P0-44	System working mode	0: Constant voltage mode 1: Constant speed mode	1	0	★	Adjust this value to change the working mode

Function code	Description	Set range	Unit	Default	Modification level	Notes
P0-45	Pressure display mode	0: overall display 1: Independent display	1	0	☆	
P0-47	Application macro selection	0-15	1	0	★	Refer to the macro parameter setting table for details

4.4 Frequency and Auxiliary Function Group

Function code	Description	Set range	Unit	Default	Modification level	Notes
P1-00	Multiple online slave backup host action selection	0: stop 1: Constant speed 2: Constant pressure	1	0	☆	
P1-01	Multiple online network mode selection	0: slave 1: Host	1	0	●	
P1-02	Number of multi-line auxiliary machines	0~5	1	0	●	
P1-03	Multiple online operating modes	0: Multi-pump main and auxiliary control 1: Multi-pump synchronous control 2: Multiple pumps, one use and one standby control	1	0	☆	

Function code	Description	Set range	Unit	Default	Modification level	Notes
P1-04	Multi-line rotation interval time	0min ~ 2000min	1min	240min	☆	
P1-05	Maximum output frequency	50.00Hz ~ 400.00Hz	0.1Hz	50.00Hz	★	
P1-06	Upper frequency	Lower limit frequency P1-07 ~ Maximum frequency P1-05	0.1Hz	50.00Hz	☆	Maximum adjustable frequency range of the machine
P1-07	Lower limit frequency	0.00Hz ~ upper limit frequency P1-06	0.1Hz	0.00Hz	☆	
P1-08	Frequency is lower than the lower limit frequency action	0: run at lower frequency limit 1: shutdown 2: Zero speed operation	1	0	☆	
P1-09	Carrier frequency	1.0kHz ~ 16.0kHz	0.1kHz	8.0kHz	★	
P1-10	PID feedback loss detection value	0.00 ~ 10.00V	0.01V	0.20	☆	
P1-11	PID feedback loss detection time	0.0s ~ 100.0s	0.1s	30.0s	☆	
P1-12	Motor power selection	0: 0.75kW 1: 1.5kW 2: 2.2kW	1	2	★	The factory is 2.2kW, the customer needs to adjust the settings according to the actual pump
P1-13	Motor rated power	0.1kW ~ 2.2kW	0.1kW	2.2	★	
P1-14	Motor rated frequency	0-Maximum frequency P1-05	0.1Hz	50.00	★	
P1-15	Motor rated voltage	0-380V	1	220	★	

Function code	Description	Set range	Unit	Default	Modification level	Notes
P1-16	Motor rated current	1.00-10.00	0.01 A	9.60	★	
P1-17	User password	0 ~ 65000	1	0	☆	
P1-18	DI1 terminal function selection	0: No function 1: Forward running FWD	1	1	★	
P1-19	DI2 terminal function selection	-10: External fault input (normally open)	1	10	★	
P1-20	DI filter time	0.000s ~ 1.000s	0.001 s	0.010s	☆	
P1-21	DI1 enable delay time	0.0s ~ 100.0s	0.1s	1.0s	☆	
P1-22	DI2 enable delay time	0.0s ~ 100.0s	0.1s	1.0s	☆	
P1-23	DI1 disable delay time	0.0s ~ 100.0s	0.1s	0.0s	☆	
P1-24	DI2 disable delay time	0.0s ~ 100.0s	0.1s	0.0s	☆	
P1-25	Automatic fault reset times	0 ~ 10	1	5	☆	
P1-26	Automatic fault reset time	0.0 ~ 100.0s	0.1s	30.0s	☆	
P1-27	Cooling fan control	0: The cooling fan runs when the motor is running 1: Automatically operate according to the radiator temperature	1	1	☆	


Function code	Description	Set range	Unit	Default	Modification level	Notes
P1-28	Stop mode	0: Decelerate to stop 1: Free parking	1	0	☆	
P1-29	Keyboard setting frequency	0.00Hz ~ maximum frequency P1-05	0.01 Hz	50.00Hz	☆	
P1-30	PID action direction	0: positive effect 1: Counteraction	1	0	☆	
P1-31	PID low frequency hold frequency	0.00Hz ~ 50Hz	0.01 Hz	20.00	☆	
P1-32	Sleep detection cycle	0.0 ~ 1000.0	0.1s	30.0	☆	The machine detects sleep at this time
P1-33	PWM mode	0: CPWM 1: CPWM and DPWM switching	1	1	★	
P1-34	Command source selection	0: Operation panel command channel (LED off) 1: Terminal command channel (LED on) 2: Serial port communication command channel (LED flashes)	1	0	☆	Choose different start and stop methods
P1-35	Local address	1~6, 0 is the broadcast address	1	1	☆	

Function code	Description	Set range	Unit	Default	Modification level	Notes
P1-36	Baud rate	0: 4800 bPS 1: 9600 bPS 2: 19200 bPS 3: 38400 bPS	1	1	☆	
P1-37	Data Format	0: No parity (8.N.1) 1: Odd parity (8.O.1) 2: Even parity (8.E.1)	1	0	☆	
P1-38	Response delay	0ms ~ 20ms (0~200ms)	1ms	2	☆	
P1-42	Motor type selection	0: Three-phase motor 1: Single-phase motor	1	0	★	
P1-43	Single-phase motor main and auxiliary winding turns ratio	10 ~ 200	1	100	☆	
P1-44	Single-phase motor current correction factor	50 ~ 200	1	150	☆	
P1-45	Water shortage protection reset times	0~9999	1	10	☆	
P1-47	Parameter hidden selection	0: not hidden 1: hidden	1	1	☆	

4.5 Parameter Setting Procedure


Taking the commonly used parameters of P0-00 - P0-05 as an example, the parameters setting steps are as follows.

Set P0.00 (Pressure setting)

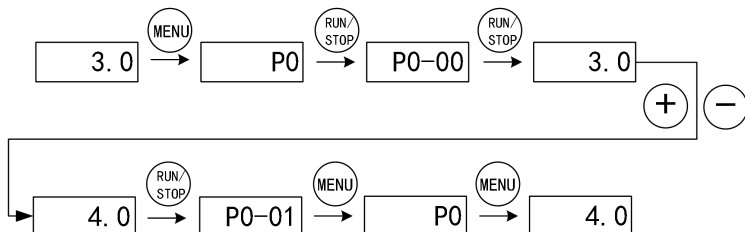


Notes: Pressing “+” or “-” to modify the setting pressure as 4.0 in the stop displayed status


Set P0.01 (Startup pressure derivation)

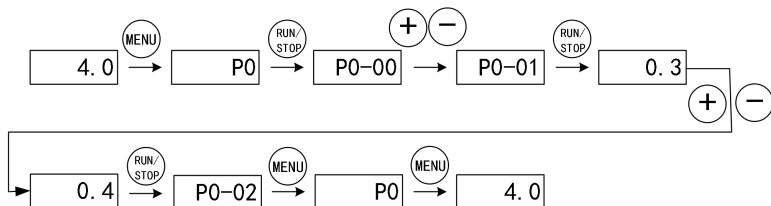


Set P0.02 (Running direction)

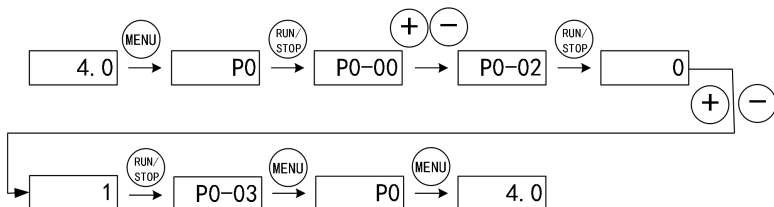


Set P0.03 (Sensor range)

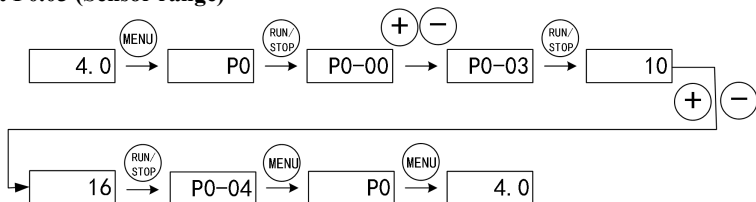

Set P0.04 (Sensor feedback type)

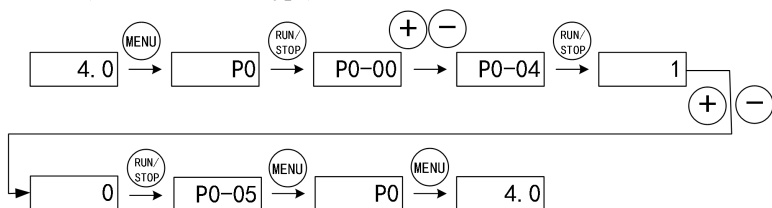

Set P0.05 (Power setting of sensor)

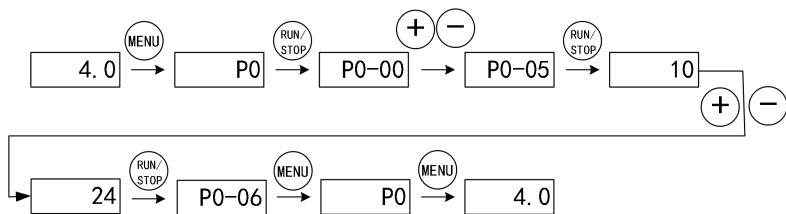

4.6 Programming Description of Parameters

P0-00	Pressure setting	0.0~P0-03	bar	3.0	
P0-03	Sensor range	0.0~200.0	bar	10.0	The maximum range of sensor
P0-04	Sensor feedback type	0: Voltage feedback 1: Current feedback		1	

P0-03 is the range of the sensor. Common range is 1MPa, namely 10.0bar.

P0-00 is the pressure value of the pipe network. If P0-00=3.0bar, after the smart pump drive is started, the pressure of the pipe network keeps constant at 3.0 bar.

General sensor is in current type. The wiring method of SPD is similar to pressure transmitter, connected to AI terminal as pressure feedback: if voltage sensor is use, please modify P0-04 to 0. The wiring method of SPD is similar to transmissible pressure gauge, connected to AI terminal as pressure feedback.

When feedback value is smaller than or equal to set pressure minus PID start pressure (P0-00~P0-01) , and it holds the state in P0-10 set time, PID adjustment will be restarted. For example, when P0-00=3, P0-01=0.3, P0-10=5.0, if feedback value is smaller than or equal to 2.7, and the time is longer than 5s, PID adjustment will be restarted. Once it is larger than 2.7, the time will recount.

P0-01	Start pressure deviation	0.0~P0-00	bar	0.3	The value that is lower than PID set pressure
P0-10	PID wakeup detection delay	0.0~100.0	s	3.0	PID wakeup detection delay

P0-02	Running direction of motor	0: Forward 1: Reverse		0	Modify this parameter to change running direction
-------	----------------------------	--------------------------	--	---	---

In initial use, confirm the rotation direction of motor. Exchange arbitrary two lines of output power line U, V, W of the SPD or modify parameter P0-02 to change the rotation direction of the motor.

P0-06	Proportional gain	0.0~100.0	%	2	The larger the parameter, the faster the response speed of the pressure system. However, when it is set too big, the system will oscillate. Adjust it according to different water supply system.
-------	-------------------	-----------	---	---	---

Adjustment method:

If factory parameters can't meet demands, adjust parameters finely. First increase proportional gain to make sure that the system will not oscillate.

Note: improper parameter setting of P0-06 will cause huge speed overshoot, and even over voltage fault in overshoot back.

P0-08	PID sleep choices	0~2		2	0: Sleep invalid 1: Sleep mode 1 2: Sleep mode 2
P0-09	PID sleep detection delay	0.0~120.0	s	1.0	In small water consumption, if sleeping is slow or it can't sleep, make the value smaller; if it sleeps in advance or it starts and stops frequently, make the value bigger.
P0-10	PID wakeup detection delay	0.0~120.0	s	1.0	PID wakeup detection delay
P0-11	PID sleep low level hold frequency	0.00~60.00	Hz	35.00	PID runs at sleep low level hold frequency. After the time of P0-12, PID sleeps.
P0-12	Running time at PID low level hold frequency	0.00~3600	s	3.0	
P0-13	PID sleep deviation pressure	0.0~P0-01	bar	0.1	If feedback pressure is in sleep deviation range, start sleeping treatment.

After selecting sleep mode 1 by parameter P0-08, the SPD will detect whether feedback pressure is higher than set pressure. If yes, the SPD will start sleep detection. After PID sleep detection delay set by P0-09, if feedback pressure is still higher than set pressure, SPD will decrease output frequency gradually to sleep detection low level hold frequency set by P0-11. After sleep detection low level hold frequency waiting time, if feedback pressure is still higher than set pressure, the SPD decreases output frequency to 0Hz and enter standby. If in above process, feedback pressure is lower than set pressure, the SPD will judge as invalid sleep detection and come back to PID adjustment status.

After the SPD enters standby, if feedback pressure is lower than PID sleep threshold, SPD will start wakeup detection. After PID wakeup detection delay set by P0-10, if feedback pressure is still lower than wakeup pressure threshold, wakeup is successful and SPD comes back to PID adjustment status; else, wakeup fails. Too high PID sleep threshold may cause frequent start and stop of the SPD. Too low PID sleep threshold may cause deficient pressure.

Notes: sleep holding frequency of different water supply system is different. When there is no water outside and the water tap is turned off, but the pump is still running, increase P0-11 to sleep holding frequency.

P0-14	Automatically start self-reset at power on	Ones: Auto-start choices 0: OFF 1: ON Tens: Fault self-reset choices 0: OFF 1: ON		10	By default, self-reset is ON and auto-start is OFF.
P0-15	Auto-start delay at power on	0.0~100.0	s	5.0	Delay time before auto-start at power on

If you hope that the SPD can start automatically after time delay set by P0-15 at power on, after setting all parameters, make P0-14 = 1 to enable auto-start function of the SPD. Every time at power on or fault reset, it will start automatically.

P0-16	Antifreeze	0: OFF 1: ON		0	Self anti-freezing function of pump
P0-17	Anti-freezing running frequency	0.0~60.00	Hz	8.00	
P0-18	Anti-freezing running time	0~9999	s	60	
P0-19	Anti-freezing running interval	0~9999	s	300	When it is set as 0, it keeps running at anti-freezing running frequency

Set P0-16=1 to enable anti-freezing function. The SPD will adjust the running frequency of pump according to current status after it is started.

Note:

- ① Pump auto-adjusting given frequency is prior to anti-freezing frequency.
- ② Anti-freezing frequency can't be set to high. It should be set as the frequency that can just drive the pump but can't supply pressure.

P0-20	Water leakage coefficient	0.0~100.0		1.0	The bigger the water leakage, the bigger the coefficient.
-------	---------------------------	-----------	--	-----	---

In no water consumption, because of water leakage of pipe network, the SPD can't sleep and stop. It starts and stops frequently. To solve the water leakage problem of pipe network, modify the value of P0-20 according to water leakage. The bigger the water leakage, the bigger the coefficient.

P0-21	Set value of high pressure alarm	0.0~P0-03	bar	8.0	When feedback pressure is bigger than or equal to the set value, after the delay of P0-22, it alarms and stops.
P0-22	Detection time of high pressure alarm	0.0~200.0	s	3.0	
P0-23	Set value of low pressure alarm	0.0~P0-21	bar	0.0	When feedback pressure is smaller than the set value, after the delay of P0-24, it alarms and stops. This function is invalid when it is set to 0.
P0-24	Detection time of low pressure alarm	0.0~200.0	s	3.0	

The SPD will compare P0-21 and P0-23 according pipe network pressure fed back by sensor. If pressure is abnormal, it will stop and alarm automatically to protect pipe network system.

P0-25	Water shortage protection	0-3		2	0: off 1: Judging water shortage according to frequency and current 2: Judging by frequency and pressure 3: Judging water shortage based on frequency, current and pressure
P0-26	Water shortage fault detection threshold	0.0~P0-00	bar	0.5	It judges water shortage only when feedback pressure is smaller than the set value.
P0-27	Water shortage protection detection frequency	0~60.00	Hz	48.00	It is valid when P0-25 = 01. Comparison frequency of water shortage judgment.
P0-28	Current percentage of water shortage protection detection	0-100	%	40.0	It is valid only when P0-25=01. Percentage of motor rated current.
P0-29	Water shortage protection detection time	0~900.0	s	60.0	

P0-30	Self-restarting delay of water shortage protection	0~9999	min	15	If it is set to be 0, use pressure to self-reset water shortage.
-------	--	--------	-----	----	--

Following methods can realize water shortage protection by default:

- (1) The switch of water shortage protection is turned on (P0-25=X) ;
- (2) The feedback pressure is less than allowed threshold value of water shortage detection(feedback pressure<P0-26);
- (3) The current running frequency is no less than water shortage protection detection frequency (running frequency>=P0-27) ;
- (4) When (1) - (3) are satisfied, timing starts. When the time meeting the condition exceeds abnormal pressure alarm delay time (delay time>P0-29), water shortage fault will be reported. When either condition is not satisfied during timing, timing recounts.

When water shortage fault is reported, after the time set by P0-30, the drive will reset. By setting the next following parameters:

P0-32	Inflow detection pressure	0.0~P0-00	bar	1.0	
P0-33	Inflow detection time	0.0~100.0	s	20.0	

Use inflow detection pressure to reset water shortage faults directly.

Note: When judge water shortage according to pressure, because the working condition of each drive is different such as range of load size, only setting the value of P0-28 reasonably according to site conditions can it make correct judgment to water shortage.

Setting method: Run the drive. When running frequency reaches maximum frequency, turn off inlet and record the output current displayed on the drive. Divide this current by P1-16 (the rated current of the motor) to get a percentage. Make the value of P0-28 a little higher than 5-10 percentage points of the percentage. Too high value of P0-28 will lead to false water shortage report in normal operation. Water shortage protection will not work effectively with too low value of P0-28.

P0-34	Lower limit of AI input signal	0.0~P0-35	V/mA	2.00	Used to correct lower limit of AI signal
P0-35	Upper limit of AI input signal	P0-34~20	V/mA	10.00	Used to correct upper limit of AI signal

If you find there is some deviation between sensor feedback pressure and feedback pressure displayed on SPD, adjust above parameter to correct the sensor.

Note: the unit of current sensor is 4~20mA; that of voltage sensor is 0~10V.

P0-36	Acceleration time	0.1~3600	s	2.0	
P0-37	Deceleration time	0.1~3600	s	2.0	

Acceleration/deceleration time setting of the pump's motor.

P0-38	Parameter initialization	0~2		0	
-------	--------------------------	-----	--	---	--

When P0-38 is set as 1, restore factory defaults.

P0-39	Parameter lock function	0~1		0	
-------	-------------------------	-----	--	---	--

After setting parameters, if you don't want them to be modified by misoperation, make P0-39= 1. At this time, parameters can only be monitored, but not be modified. Only when P0-39 is modified to 0, can parameters be modified.

P0-40	Current fault type	0~29			
-------	--------------------	------	--	--	--

Record fault type of the SPD. 0 means no fault. 1~29 refers to E001~E029. For more details, please refer to fault inspection and troubleshooting chapter.

P1-34	Start/stop signal choices	0~1		0	0: Start/stop by keyboard 1: Start/stop by terminals
P0-43	Frequency source choices	0~8		8	0: Digital setting 1~7: Reserved 8: Water supply PID

Each SPD can choose different start/stop modes and frequency sources.

P1 group parameters have the same meaning as P0 group. Please refer to P0 group for more details.

P1-06	Upper limit frequency	P1-07~60.0	Hz	50.00	
P1-07	Lower limit frequency	0.00~P1-06	Hz	0.00	
P1-08	Action choices when running frequency is lower than lower limit frequency	0: Run at lower limit frequency 1: Stop 2: Standby		2	

P1-06 limits the maximum working frequency of SPD.

Use P1-08 to choose running status of SPD when running frequency is lower than lower limit frequency. To prevent motor from being in low speed operation for a long time, you can use this parameter to stop it.

If use a 60Hz pump, please set parameters according to the following steps.

Step 1: Set the parameter P1.06 (Upper limit frequency) to 60

Step 2: Set the parameter P1.13 (Motor rated frequency) to 60

P1-09	Carrier frequency setting	1.0~15.0	kHz	Set according to models	
-------	---------------------------	----------	-----	-------------------------	--

Use this parameter to adjust carrier frequency of SPD. You can decrease motor noise by adjusting carrier frequency, avoid point of resonance, decrease leakage current of wires to ground and decrease interference of SPD.

When carrier frequency is high, motor loss decreases, temperature rising of motor is small, but SPD loss increases, temperature rising of SPD increases and interference increases.

P1-10	Feedback broken line detection value	0.0~1.00	V	0.20	
P1-11	Feedback broken line detection time	0.0~3600	s	30.0	

Feedback broken line detection value: the detection value is relative to input signal voltage. System keeps detecting PID feedback value. When feedback value is smaller than or equal to feedback broken line detection, system starts detection timing. When detection timing exceeds feedback broken line detection time, system will report PID feedback broken line fault.

Please set according to parameters of the motor nameplate.

To guarantee control performance, please configure motor according to standard adaptive motor of drives. If there is big difference between motor power and standard adaptive motor, control performance of drives will decrease obviously.

Chapter 5 Fault Information and Troubleshooting

5.1 Fault Codes Description

Fault code	Fault type	Possible reasons	Solution
E001	Invert cells fault	1. Too fast acceleration	1. Increase acceleration time
		2. IGBT inside broken	2. Seek for support
		3. Malfunction caused by interference	3. Check whether peripheral equipments have strong interference source
		4. .Sound grounding or not	4. Check grounding line
E002	Over current in accelerated running	1. Too fast acceleration	1. Increase acceleration time
		2. Too low grid voltage	2. Check input power
		3. The power of the SPD is too low	3. Use bigger power SPD
E003	Over current in decelerated running	1. Too fast deceleration	1. Increase deceleration time
		2. The inertia torque of load is too big.	2. Add proper dynamic braking modules
		3. The power of the SPD is too low	3. Increase power of the SPD
E004	Over current in constant speed running	1. Saltation or abnormality happens to load	1. Check the load or decrease the saltation of the load
		2. The grid voltage is too low	2. Check input power supply

Fault code	Fault type	Possible reasons	Solution
		3. The power of the SPD is too low	3. Use bigger power SPD
E005	Over voltage in accelerated running	1. The input voltage is abnormal	1. Check input power supply
		2. Restart rotating motor after momentary outages	2. Avoid restarting after it is stopped
E006	Over voltage in decelerated running	1. Too fast deceleration	1. Increase acceleration time
		2. The inertia of load is too big	2. Increase dynamic braking modules
		3. The input voltage is abnormal.	3. Check input power
E007	Over voltage in constant speed running	1. Abnormal changes happen to input voltage	1. Install input reactor
		2. The inertia of load is too big	2. Add proper dynamic braking modules
E008	Hardware over voltage	1. The input voltage is abnormal	1. Check input power supply
		2. Too fast deceleration	2. Increase deceleration time
		3. The inertia of load is too big	3. Increase dynamic braking modules
E009	Bus under voltage	1. The grid voltage is too low	1. Check grid input power supply
E010	Controller overload	1. Too fast acceleration	1. Increase acceleration time
		2. Restart rotating motor	2. Avoid restarting after it is stopped
		3. The grid voltage is too low	3. Check grid voltage

Fault code	Fault type	Possible reasons	Solution
		4. Overload	4. Use bigger power SPD
E011	Motor overload	1. The grid voltage is too low	1. Check grid voltage
		2. Wrong setting to motor rated current	2. Reset motor rated current
		3. Motor stall or big changes to load	3. Check the load and adjust torque lifting capacity
		4. Motor is too small	4. Use proper motor
E013	Output phase loss	U,V,W phase loss output(or the three phases of load is not symmetrical)	1. Check output wiring
			2. Check motor and cable
E014	Module overheating	1. Instant over current of SPD	1. Refer to over current solutions
		2. Output three phases have interphase or ground is short circuit	2. Re-wiring
		3. Air passage block or fan broken	3. Dredge air passage or change fan
		4. The environmental temperature is too high	4. Decrease environmental temperature
		5. SPD wire or plugins loose	5. Check and re-connect
		6. Power circuit irregularity	6. Seek for service

Fault code	Fault type	Possible reasons	Solution
		8. Control board exception	
E015	External water shortage	Water shortage is detected	Check whether water is deficient.
E018	Fault of current detection circuits	1. Poor contact of control board connector	1. Check connector and re-plug
		2. Power circuit irregularity	2. Seek for service
		3. Damage to hall devices	
		4. Exception of amplifying circuit	
E022	EEPROM read write faults	1. Read write of control parameter goes wrong	1. Press RUN/STOP key to reset
		2. EEPROM broken	2. Seek for service
E023	Torque rich	1. Too fast acceleration	1. Increase acceleration time
		2. Restart rotating motor	2. Avoid restart rotation motor
		3. Grid voltage is too low	3. Check grid voltage
		4. Load is too heavy	4. Use big power SPD
E024	PID feedback broken line fault	1. Sensor broken line or poor contact	1. Check the installation and wiring of sensor
		2. Broken line detection time is too short	2. Increase broken line detection time
		3. The sensor is broken or the system has no feedback signal	3. Change sensor

Fault code	Fault type	Possible reasons	Solution
E025	Running time reaches set time	1. Running time reaches set time	1. Seek for service
E026	Reserved	Reserved	Reserved
E027	Water shortage alarm	1. Water pressure/level exception	1. Check whether the pressure of inlet is abnormal or not
		2. Sensor broken line or poor contact. System has no feedback signal	2. Check the installation and wiring of sensor
		3. Water shortage alarm detection time is too short (P0-29)	3. Check relevant parameter settings
		4. Water shortage protection frequency is too low(P0-27)	
		5. Water shortage protection detection current is too low(P0-28)	
E028	High pressure alarm	1. Feedback signal of sensor exception	1. Check the wiring of sensor
		2. High pressure alarm value adjustment is too low (P0-21)	2. Check relative parameter settings
		3. Alarm detection time adjustment is too short (P0-22)	
E029	Low pressure alarm	1. Low pressure alarm value is set too high (P0-23)	1. Modify parameters
		2. Sensor broken line or poor contact. System has no feedback signal	2. Check the sensor

Fault code	Fault type	Possible reasons	Solution
		3. Sensor type is inconsistent with actual situation	

5.2 Common Faults and Actions

The following faults may happen in use. For brief fault analysis, please refer to the following methods.

5.2.1 No display at power on

- (1) Check whether the input power is consistent with the nominal voltage of the drive with multimeter.
- (2) Check whether the three-phase rectifier bridge is intact. If the rectifier bridge is broken down, please request service.

5.2.2 The power air switch trips off at power on.

- (1) Check whether there is short circuit or ground connection between input power. If yes, please eliminate it.
- (2) Check whether the rectifier bridge has been broken down. If yes, please request service.

5.2.3 The motor doesn't rotate after the SPD runs.

- (1) Check whether there is balanced three-phase output among U, V,W. If yes, check whether the motor is broken or blocked. If no, please confirm whether the motor parameters are set correctly.
- (2) If there is output but the three-phase power is not balanced, please request service.
- (3) If there is no output voltage, please request service.

5.2.4 SPD shows normally at power on but the power air switch trips off after running.

- (1) Check whether short circuit occurs between output modules interval. If yes, please request service.

- (2) Check if there is short circuit or ground connection between motor leads. If yes, please eliminate it.
- (3) If switch stripping off occurs occasionally and the distance between motor and inverter is far, consider to add output AC reactor.

5.2.5 It doesn't stop in no water use.

- (1) Check whether the feedback pressure displayed on the SPD board is no less than set pressure. If the feedback pressure is less than set pressure, please check whether the range of the pressure sensor is set correctly, whether the pump rotates reversely, whether there is air and whether the inlet is blocked by sundries.
- (2) If the feedback pressure is no less than set pressure, please decrease the set value of P0-09 and increase P0-11.
- (3) If feedback pressure changes nearby set value, stop the SPD manually and see whether the pressure decreases. If yes, check valve needs to be changed.

5.2.6 It can't sleep in small amount of water use or leakage

- (1) If it can't sleep or the sleep time is too long, decrease P0-09 and increase P0-11, If it is still not effective, increase P0-31.
- (2) If it sleeps in advance, first increase P0-09. If it is still not effective, decrease P0-20.
- (3) If it starts and stops frequently, first increase P0-09. If it is not effective, increase P0-20. If it is still not effective, increase P0-01.

5.2.7 It can't stop to make protection in water shortage.

- (1) Water shortage protection switch P0-25 is not enabled.
- (2) The threshold value of water shortage detection P0-26 is set too low.
- (3) The current percentage of water shortage detection P0-28 is set too low.

Chapter 6 Warranty Policy

Standard Warranty Period:

The pump controller manufacturer grants a standard warranty period of 18 months (1.5 years) for the pump controllers, starting from the date of shipment from manufacturer factory or 12 months (1 year) starting from the date of purchased invoice marked (whichever is longer).

Warranty Conditions:

If your pump controller gets fault and requires troubleshooting, please contact your distributor or dealer directly. Alternatively, feedback briefly to manufacture service hotline for logging and send your warranty card to our service department by fax/email to process the warranty claim.

During the warranty period, the pump controller manufacturer covers all costs for replacing any product or parts of the product proved to be defective in design or manufacture. To claim the warranty under the warranty policy of pump controller manufacturer, you need to supply us with the following information and documentation regarding the faulty pump controller:

1. Product model No.(e.g. PDM30-2S2R2) and serial No. (e.g.C121661B280H000292YA).
2. Copy of the invoice and warranty certificate of the controller.
3. Copy of the installation report and installation date.
4. Error message on LED screen (if available) or any information which would be helpful to

determine the defect

5. Detailed information about the entire system (modules, circuits, etc.).
6. Documentation of previous claims/exchanges (if applicable).

After receiving above information, The pump controller manufacturer will decide how to proceed the service:

- ☐ Repaired by manufacture factory, or
- ☐ Repaired on-site by manufacture service center, or
- ☐ Offer a replacement device of equivalent value according to model and age.

In the case of an exchange, the remaining portion of the original warranty period will be